

MOUNTING PROCEDURE


KIT SAVE CARTER TRIUMPH SPEED TRIPLE '11 - '13

TS9101-11

WWW.BARRACUDAMOTO.COM

KIT

- X2. PVC HEAD
- X2. SAVE CARTER BASE Ø 12
- X1. THICKNESS H. 70MM
- X1. THICKNESS H. 80MM
- X1. SCREW 12X160
- X1. SCREW 12X180
- X2. NUT Ø 12

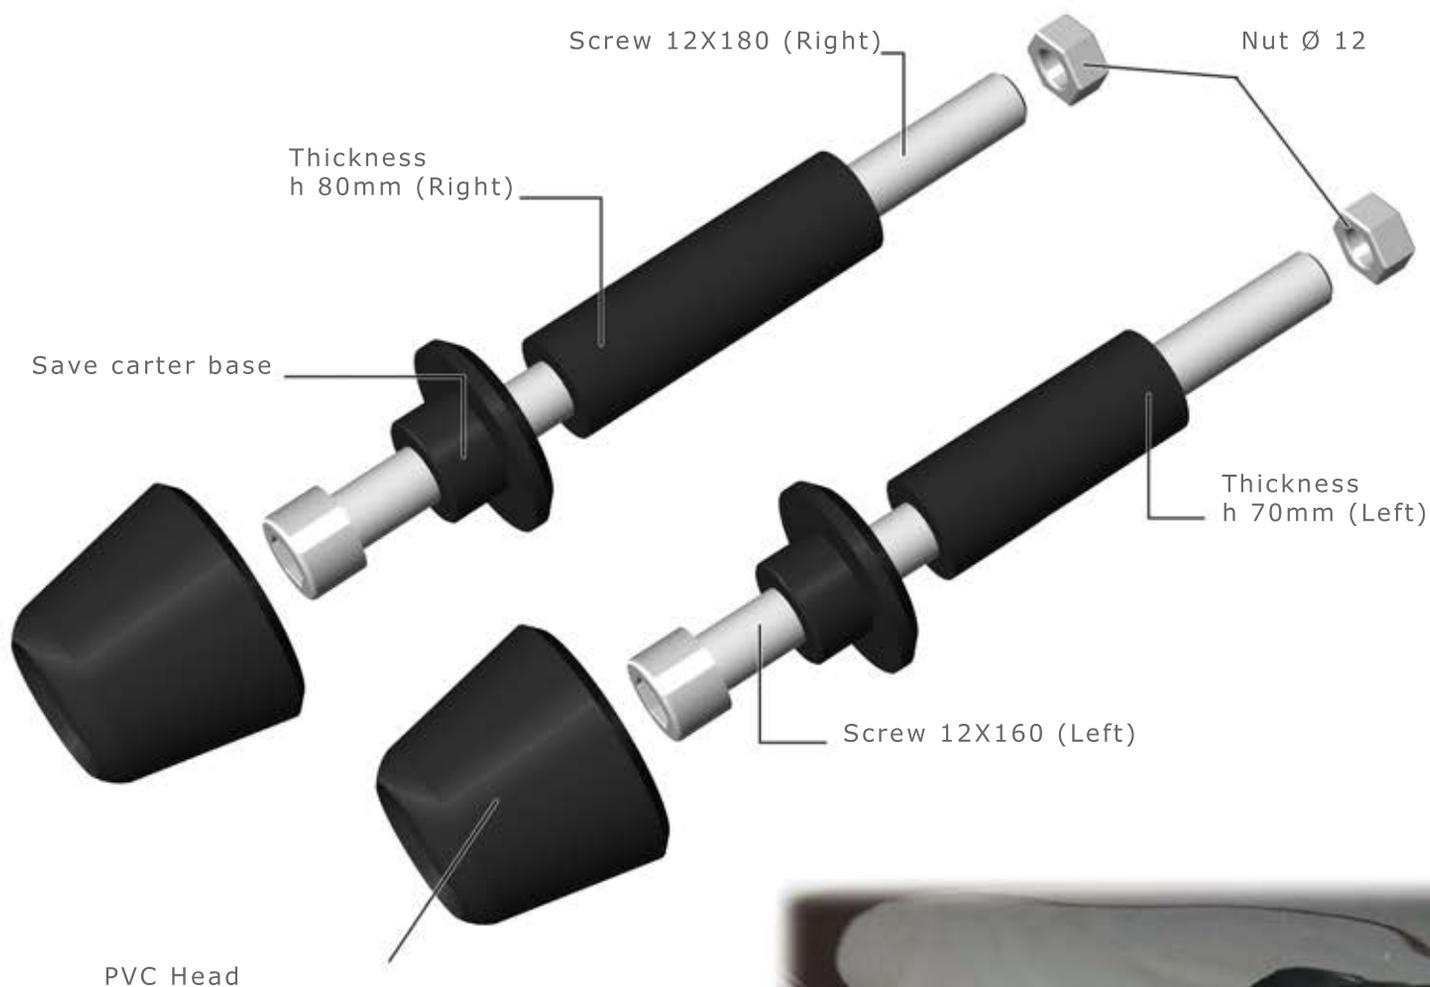

SEARCH AND FIND THE FIXING POINT ON THE MOTORBIKE BEFORE START TO MOUNTAIN, USE THE SPECIFIC THICKNESS AND BOLTS LIKE DESCRIBED IN THE PICTURE (SO YOU CAN GET THE RIGHT PROMINENCE FROM THE MOTORBIKE).
FIX THE PVC HEAD AFTER FIXED AND TIGHTEN ALL THE KIT ONLY